

trakm8 T8 Tracking Device


Summary:

The trakm8 T8 tracker detects a 6v - 30v signal through its digital input wire. When an alarm is detected by the T8, it will send a signal via GPRS through to the SWIFT vehicle tracking software. The trakm8 software can be configured to display a pop-up and play an audible alarm when the camera triggers an EVENT.

Connection:

**It is recommended to solder these connections in place.
Always shrink wrap exposed wires.**

Plug the alarm output cable in to the back of the RoadHawk DC-2 Camera.
Connect the GREEN wire from the RoadHawk DC-2 to a 12v to 32v live feed.
(you can connect the green wire from the RoadHawk DC-2 to the RED (6v to 32v) LIVE input on the T8 Tracker).
Connect the WHITE wire from the RoadHawk DC-2 to the PURPLE wire on the T8 Tracker.

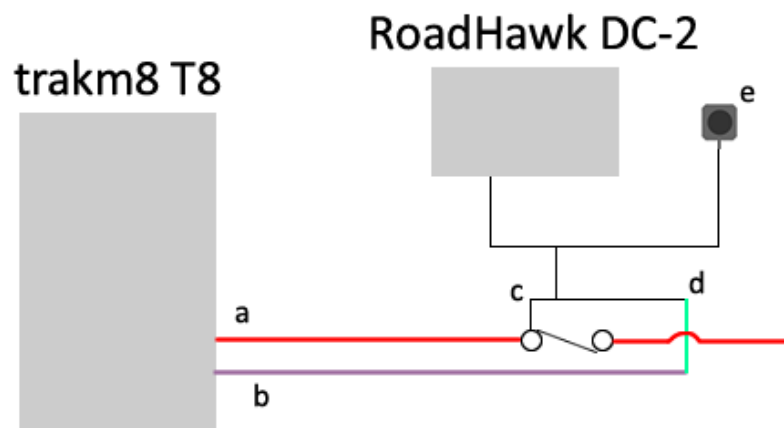

- a = 6v to 32v RED Wire to T8
- b = Purple alarm input to T8
- c = White wire from DC-2
- d = Green wire from DC-2
- e = Emergency alarm button

Configuration:

The RoadHawk DC-2 will send a signal to the trakm8 T8 if it detects an EVENT. An EVENT can be triggered by either pressing the remote input button or if the camera detects an adverse G-Force event. The camera may be triggered by driving on an uneven surface. If the camera is sending false alarms to the tracker then please adjust the sensitivity of the RoadHawk DC-2 camera using the software supplied with the camera.

The trakm8 software can be configured by logging in to the swift system and clicking on the Alert TAB. Click the settings button to configure how you wish to be alerted by camera events. A camera EVENT will trigger the "PTO goes low" alert. You can configure the swift system to send an email, show a pop-up and play an audio alert if this happens.